 


Thank you for purchasing the **Bongo High Dining Table**. This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.  
Note: 2 people are required to safely assemble this product.

## hardware



18 - long bolts




16 - short bolts



4 - adjustable feet


Missing hardware?  
Please call **800.606.6387** for replacements.

## tools required

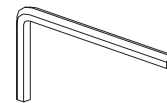


allen wrench (included)

## components

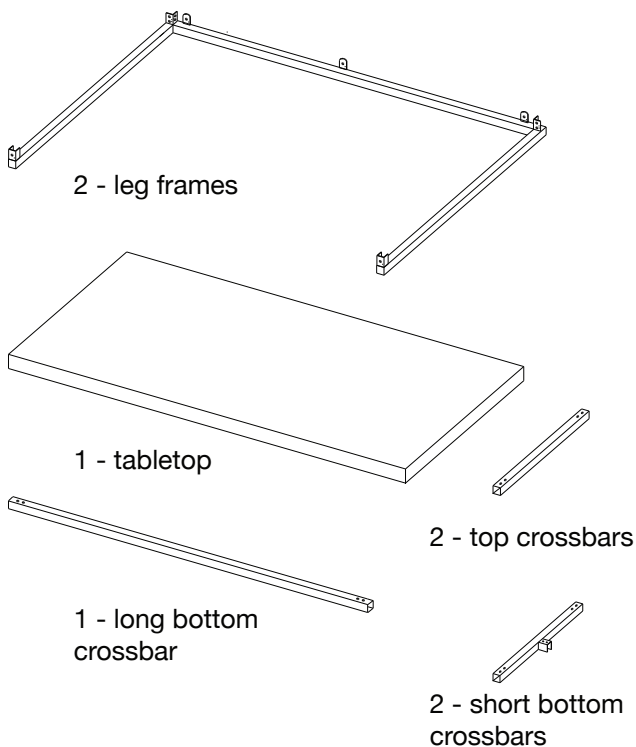

## assembly

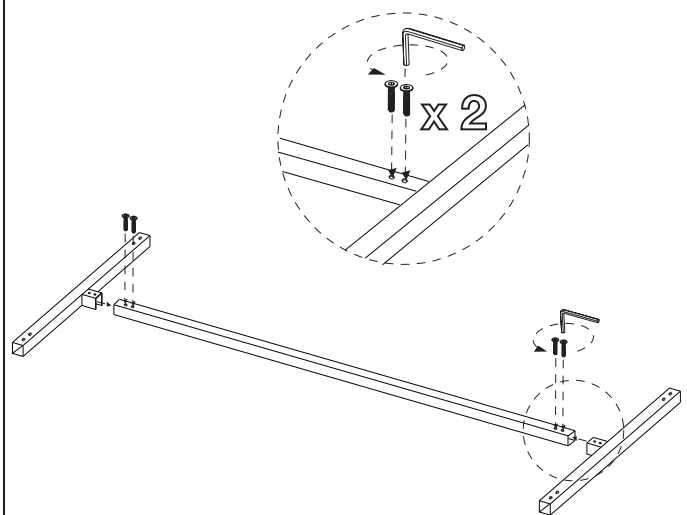

Place **short and long bottom crossbars** on a clean, padded surface. Insert short bottom crossbar into the long crossbar as shown and secure with 2 **long bolts** using an **allen wrench**.

NOTE: Do not fully tighten the bolts.

A. Place 1 **leg frame** onto clean, padded surface. Loosely attach 2 **top crossbars** onto frame as shown with 4 **small bolts** per crossbar.

B. Loosely attach **bottom crossbar unit** onto frame as shown with 2 **long bolts** per corner.

C. Insert 2 **adjustable feet** onto bottom of **front and back frame** as shown. Turn feet clockwise to adjust.

**2**

Loosely attach remaining **leg frame** onto assembled unit with 8 **short bolts** and 4 **long bolts** as shown. Do not fully tighten bolts.

**3**

With the assistance of another adult, place tabletop face down on a padded surface. Attach assembled unit onto **tabletop** with 6 **long bolts** as shown. At this point, secure all leg and tabletop bolts with an **allen wrench**. Position assembled unit upright and adjust levelers as necessary. Assembly is now complete.

**4**

## cleaning & care

Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Do not use furniture wax or polish as the unit is finished with a protective clear lacquer. It is recommended to use coasters to protect surface from heat and water.