 


Thank you for purchasing the **Decker Dining Table**. This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

## hardware



8 - brackets



16 - caps




16 - bolts


Missing hardware?

Please call **800.606.6387** for replacements.

## components

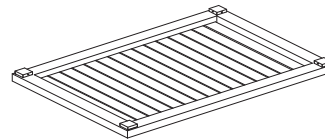


1 - tabletop

 


4 - legs

## tools required

 

allen wrench (included)

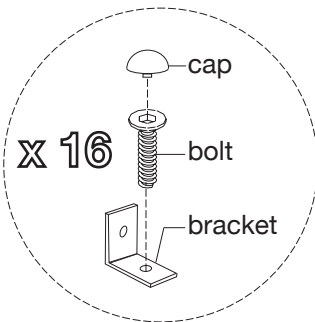

With the assistance of another adult, place **tabletop** upside down on a clean, padded surface. Fit each **leg** onto corresponding blocks under the tabletop. Attach each **leg** with 2 **brackets**, 4 **bolts** and 4 **caps** as shown. Secure, but do not over tighten bolts, with the **allen wrench**. With the assistance of another adult, position unit upright.

Assembly is now complete.

## cleaning & care

Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners.

1