 


Thank you for purchasing the **Slick Media Console**. This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 
NOTE: 2 people are required to safely assemble this product.
 - **THE WEIGHT LIMIT SHOULD NOT EXCEED 385 LBS.**
 - **THE WIDTH OF THE TV SHOULD NOT EXCEED THE WIDTH OF THE CONSOLE.**

hardware

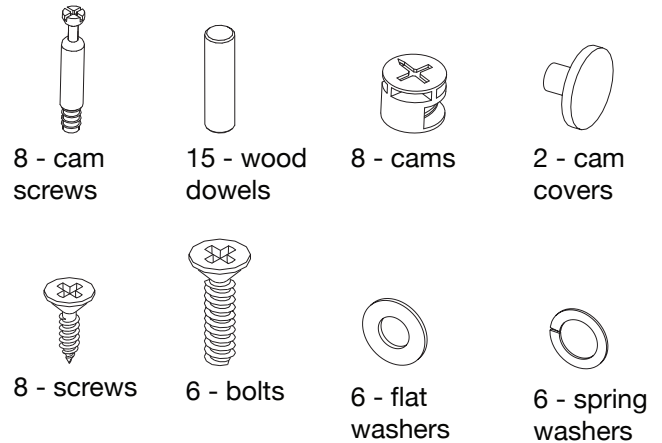

Missing hardware?
 Please call **800.606.6387** for replacements.

tools required




Phillips head screwdriver

(We recommend the use of hand tools instead of power tools)

components



 
1 - top panel




1 - bottom panel



 1 - back panel

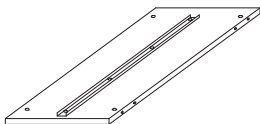


1 - partition

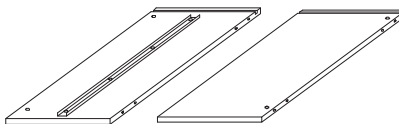 


2 - side panels
(1 left, 1 right)



 
1 - crossbar

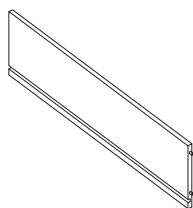


1 - drawer back

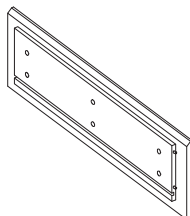 

1 - drawer front

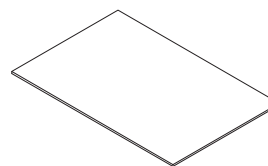 

1 - drawer bottom

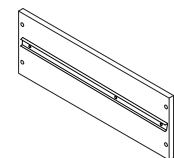 

2 - drawer sides
(1 left, 1 right)

A top panel

B crossbar

NOTE: Do not over tighten the screws

1 A. Insert 6 **cam screws** and 3 **wood dowels** into **top panel** as shown. Secure, but do not over tighten, cam screws with a **phillips head screwdriver**.
B. Fit dowels of **top panel** into corresponding holes of **crossbar**, and secure with 2 **bolts**, 2 **spring washers** and 2 **flat washers**, using a screwdriver.

2 Insert 2 **cam screws** into **bottom panel** as shown. Secure, but do not over tighten, with a **phillips head screwdriver**.

A partition

B left side panel

 
 
 
 
C right side panel

 
NOTE: Make sure arrows on each cam point toward nearest edge with holes

3 A. Insert 4 **wood dowels** and 4 **cams** into **partition** as shown. Make sure arrows on each cam points toward nearest edge with holes.
B. Insert 4 **wood dowels** and 2 **cams** into **left side panel** as shown.
C. Insert 4 **wood dowels** and 2 **cams** into **right side panel** as shown.


NOTE: Make sure drawer glide of partition is facing glide of left side panel.

4 Fit dowels of **partition** and **left/right side panels** into corresponding holes of **bottom panel** as shown. Secure **right** and **left side panels** with 4 **bolts**, 4 **spring washers**, and 4 **flat washers**. Secure **partition** by turning 2 **cams** clockwise with a screwdriver, until each cam securely engages each cam screw.

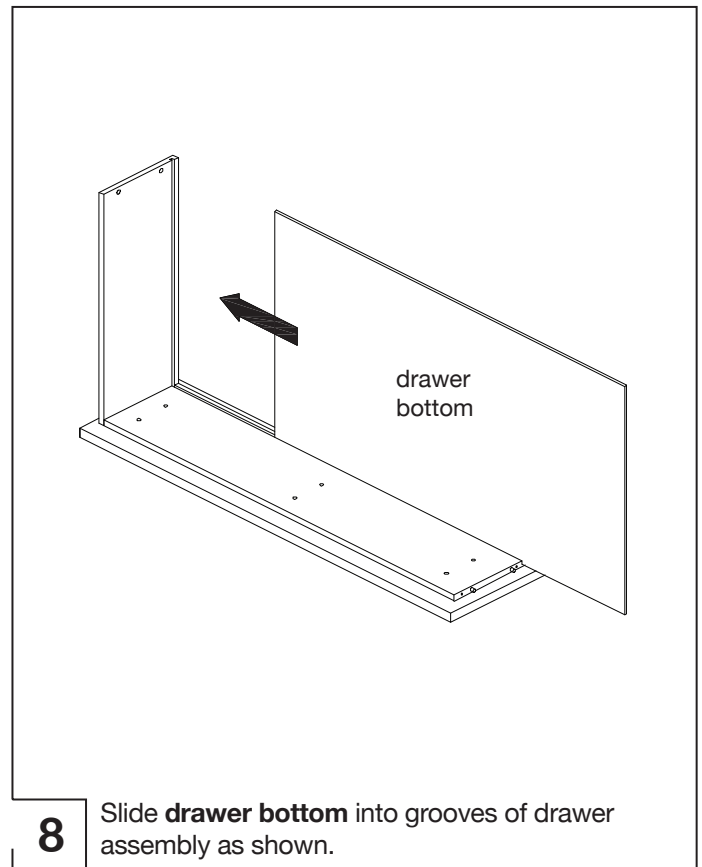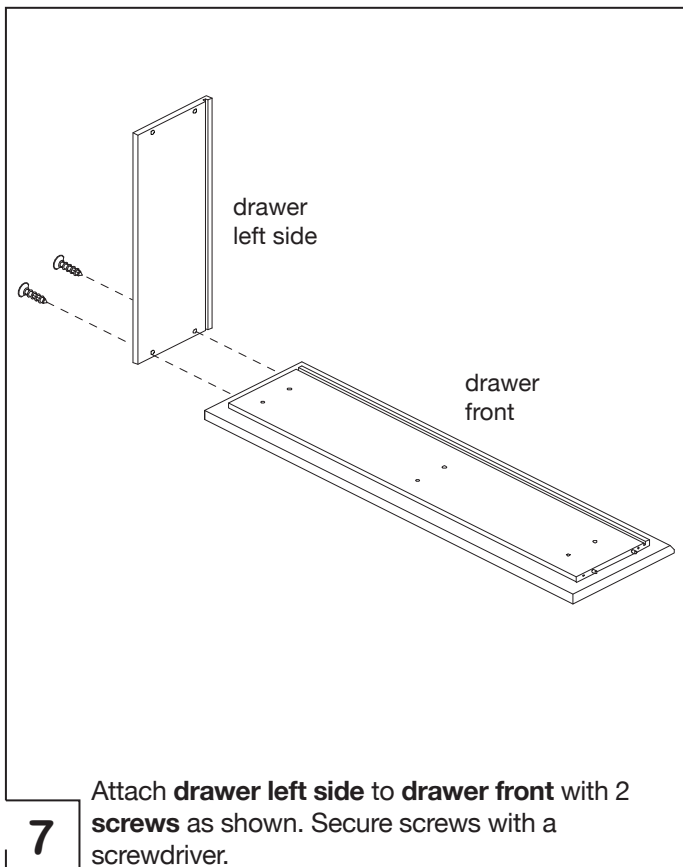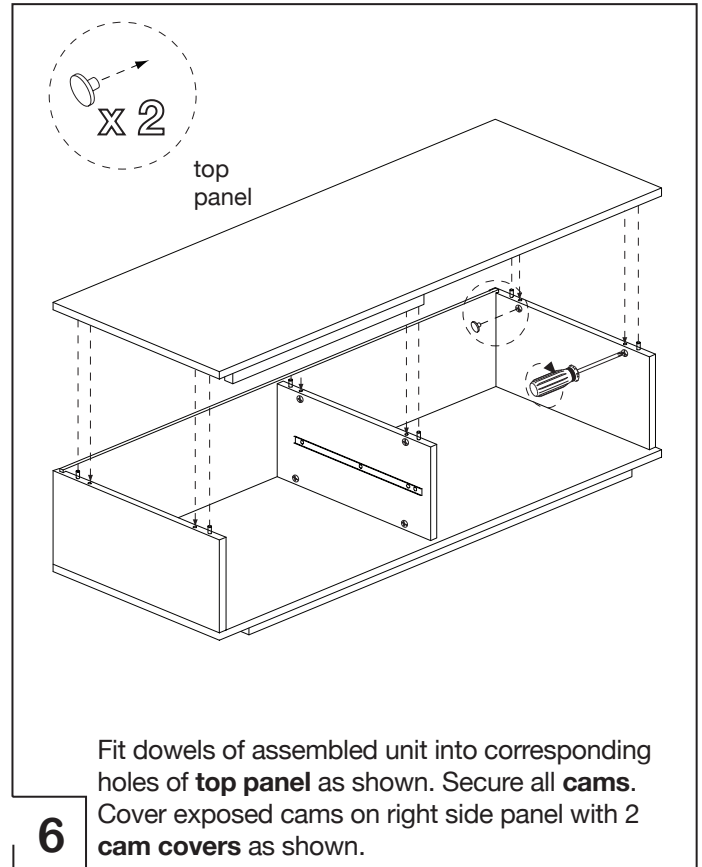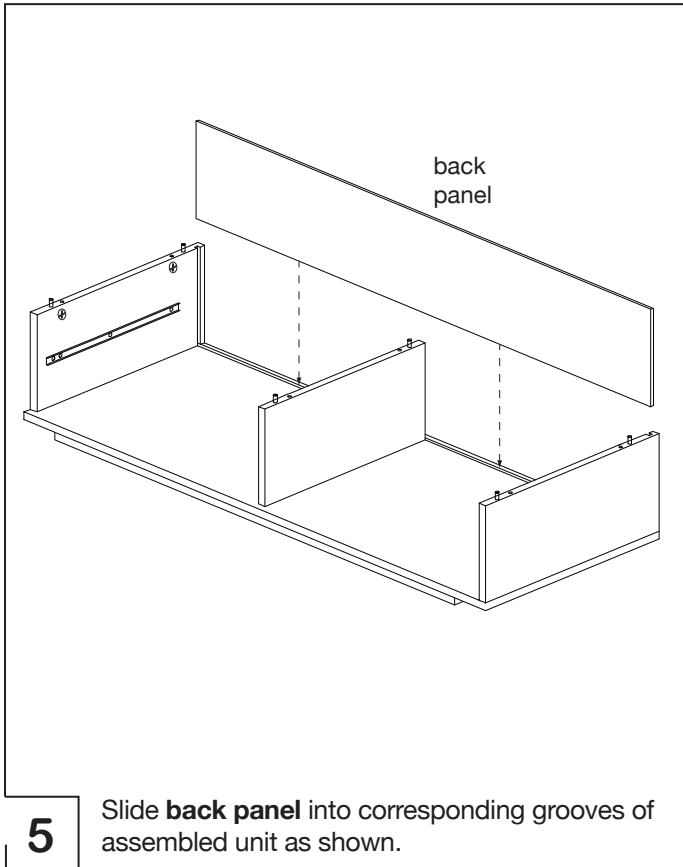


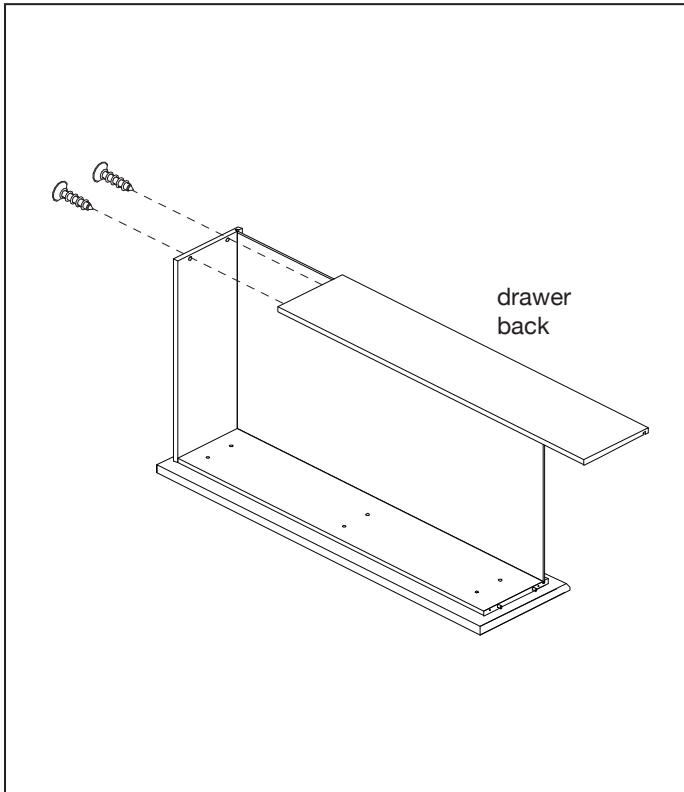

9 Attach **drawer back** to drawer assembly with **2 screws** as shown.

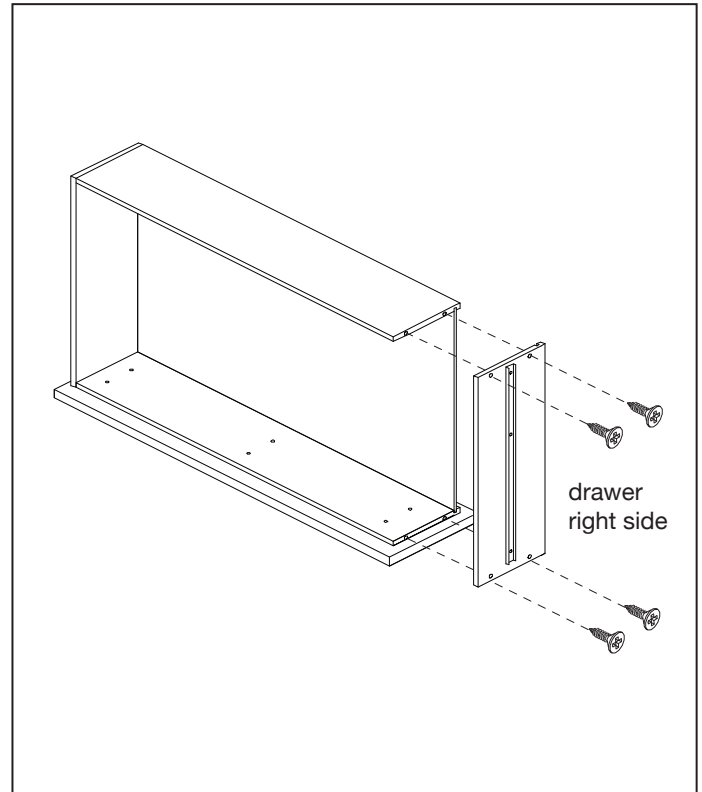 

10 Attach **drawer right side** to drawer assembly with **4 screws** as shown.

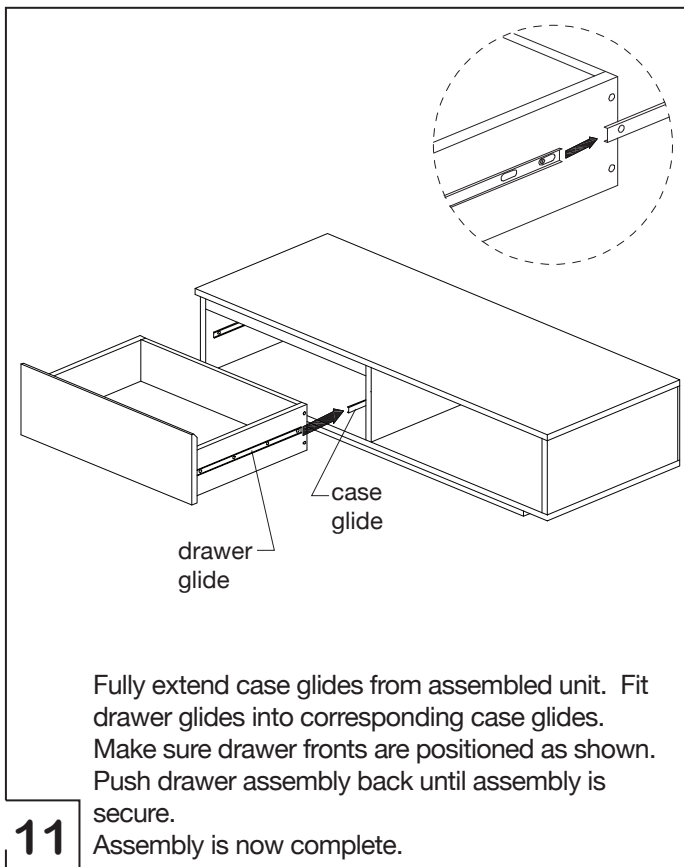 

Fully extend case glides from assembled unit. Fit drawer glides into corresponding case glides. Make sure drawer fronts are positioned as shown. Push drawer assembly back until assembly is secure.

11 Assembly is now complete.

cleaning & care

Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Do not use furniture wax or polish as the unit is finished with a protective clear lacquer. It is recommended to use coasters to protect surface from heat and water.