



Thank you for purchasing the **Facil Dining Table**. This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Note: 2 people are recommended to safely assemble this product.

 
hardware




1 - flat washer



1 - spring washer



8 - small bolts

 

1 - large bolt

 
Missing hardware?

Please call **800.606.6387** for replacements.


components



1 - tabletop




1 - bottom leg frame

 

1 - top leg frame

 tools required




allen wrench (included)

cleaning & care

Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners.

NOTE: Do not over tighten the screws

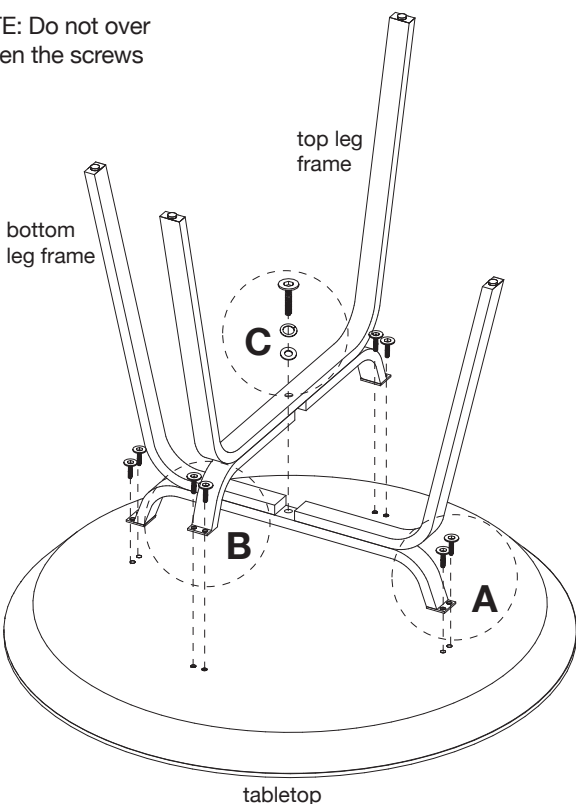

A) Carefully place **tabletop** onto a clean, padded surface as shown. Attach 1 **bottom leg frame** to **tabletop** with 4 **small bolts** using an **allen wrench**. Do not over tighten the bolts.

B) Fit notch of **top leg frame** into notch of **bottom leg frame** as shown. Secure **top leg frame** to **tabletop** with 4 **small bolts**.

C) Secure **top leg frame** to **bottom leg frame** with 1 **flat washer**, 1 **spring washer** and 1 **large bolt**. With the assistance of another adult, position assembled unit upright.

Assembly is now complete.

