

Thank you for purchasing the **Makoda Dining Table**. This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

NOTE: 2 people are required to safely assemble this product.

hardware

 


Missing hardware?
Please call **800.606.6387** for replacements.

tools required




allen wrench
(included)



flat head screwdriver
(included)

components

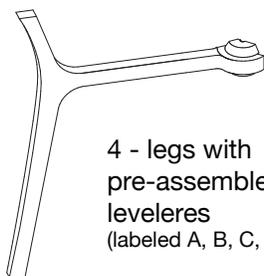


4 - legs with
pre-assembled
levelers
(labeled A, B, C, D)




2 - top
caps




2 - bottom
caps

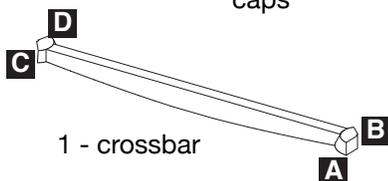

1 - crossbar

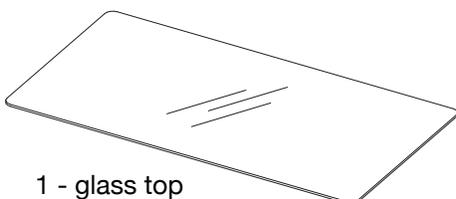


1 - glass top

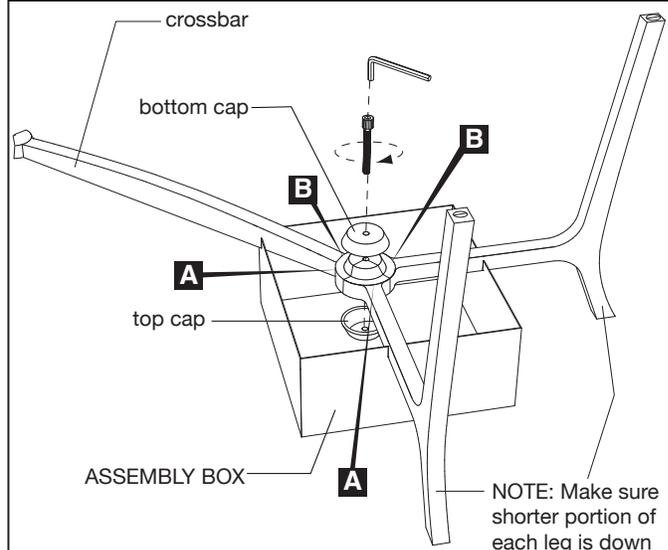

Position **leg A**, **leg B** and **crossbar A/B** into corresponding slots of **assembly box** as shown. Make sure letter labeled on each **leg** corresponds with letters labeled on **crossbar**. Attach **top and bottom caps** onto center of leg/crossbar assembly with 1 **bolt** as shown. Secure bolt with an **allen wrench**. Repeat steps for the other side of **crossbar C/D** with remaining **leg C** and **leg D**.

1

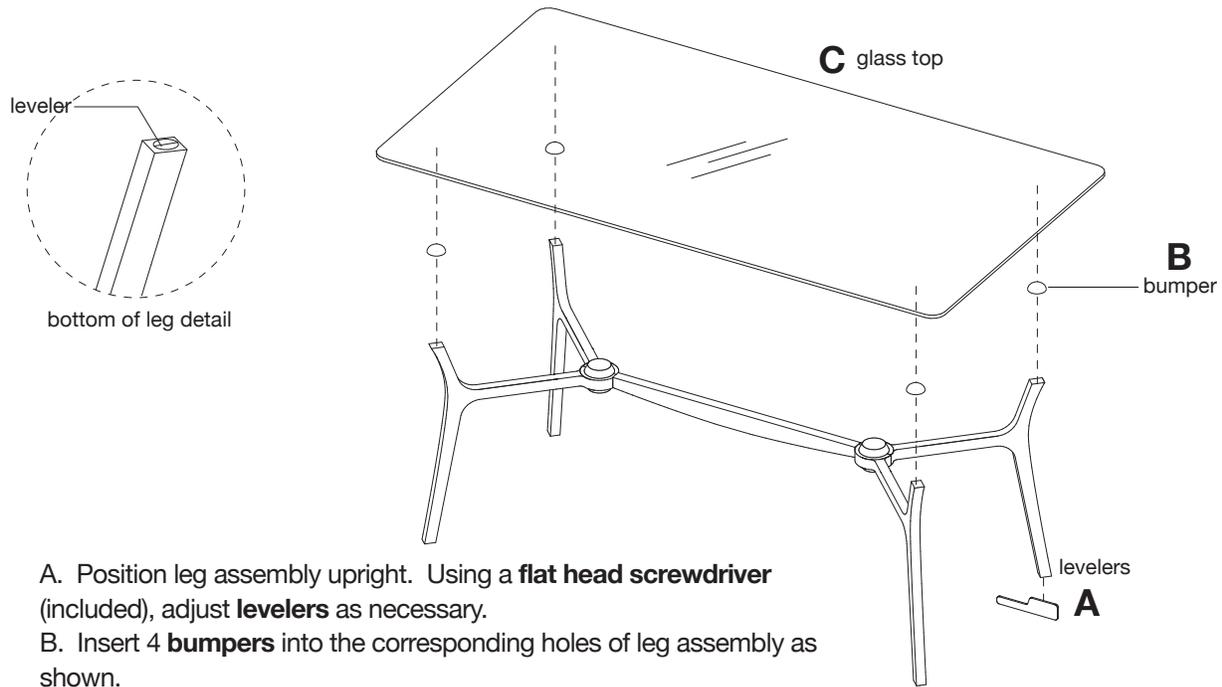

- 2**
- A. Position leg assembly upright. Using a **flat head screwdriver** (included), adjust **levelers** as necessary.
 - B. Insert 4 **bumpers** into the corresponding holes of leg assembly as shown.
 - C. Carefully place **glass top** onto leg assembly as shown. Make sure glass top is securely supported by *bumpers*.
Assembly is now complete.

cleaning and care

Clean surfaces with a dry soft cloth. Do not use abrasive cleaners or furniture wax. Glass cleaner may be used on the glass top.