


Thank you for purchasing the **Zest C Table**. This page lists all the contents included in the box. Please take time to identify the hardware as well as the individual components of this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

hardware





Missing hardware? Please call **800.606.6387** for replacements.

tools required




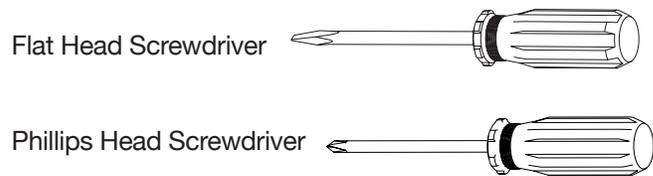


components

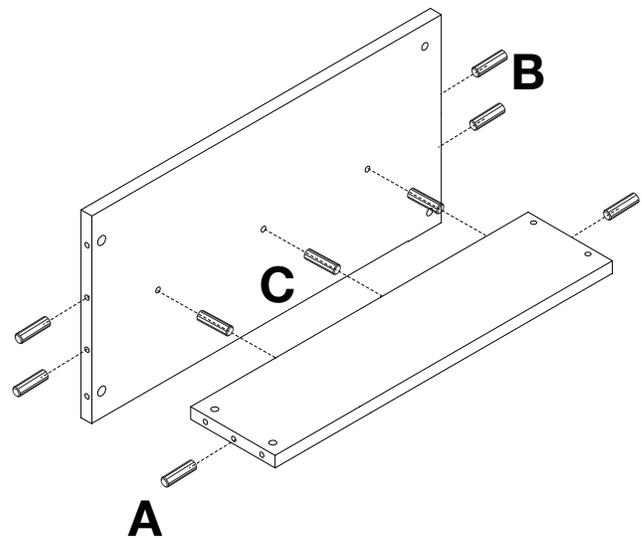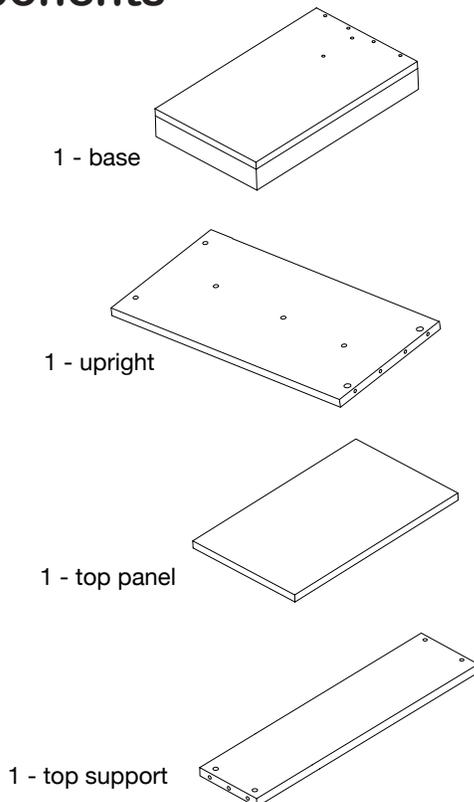

- A) Insert 2 **wood dowels** into the ends of the **top support** as shown.
- B) Insert 7 **wood dowels** into the **upright**.
- C) Fit top support onto dowels of upright and firmly press together.

1

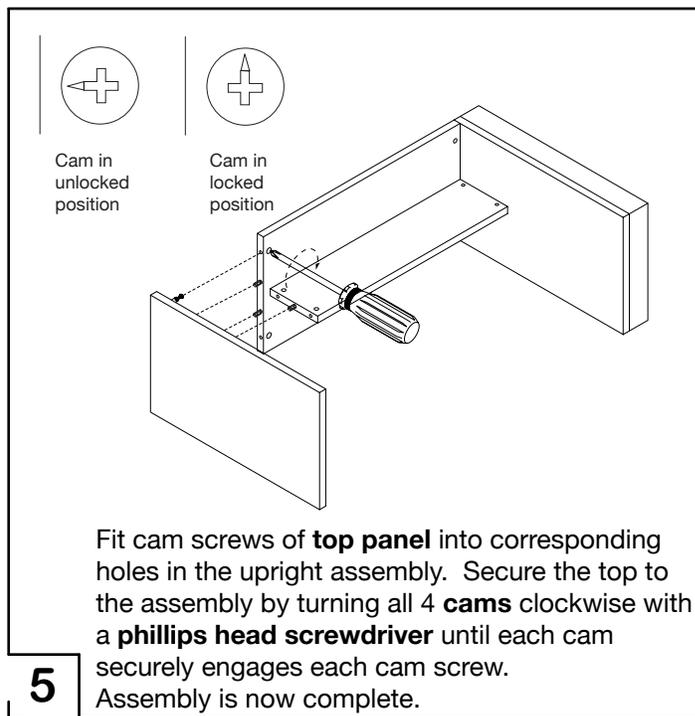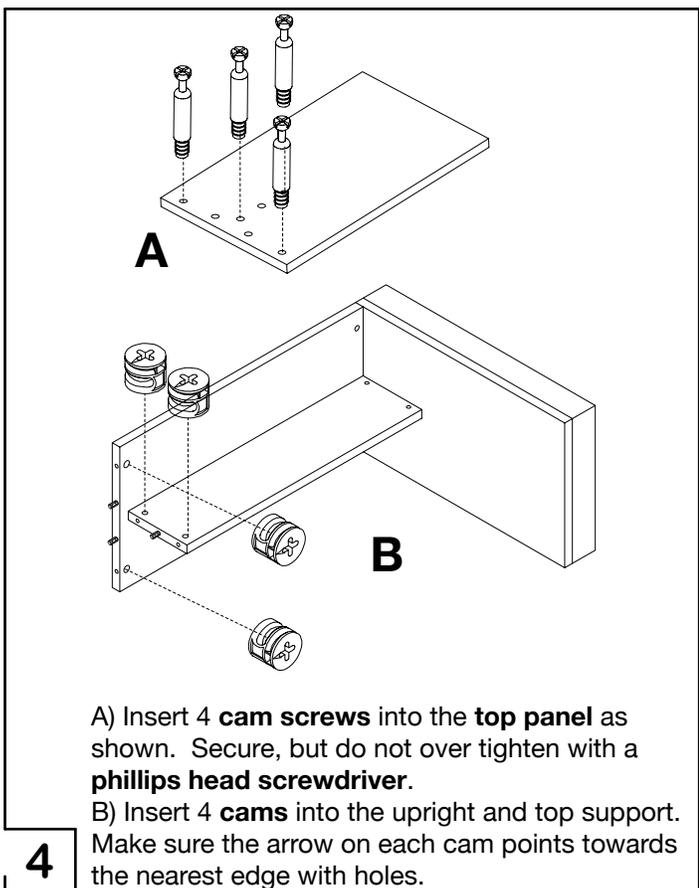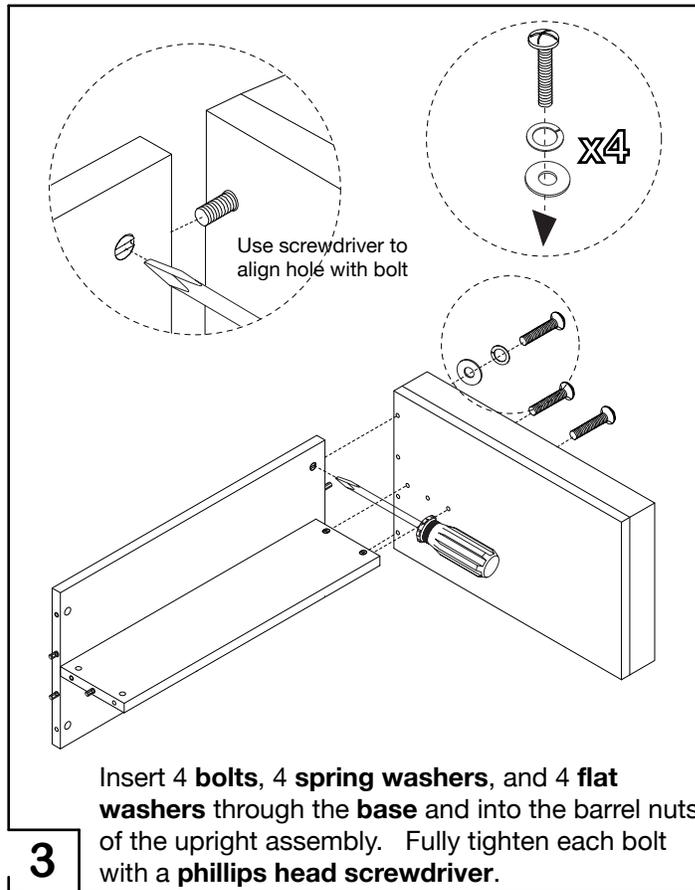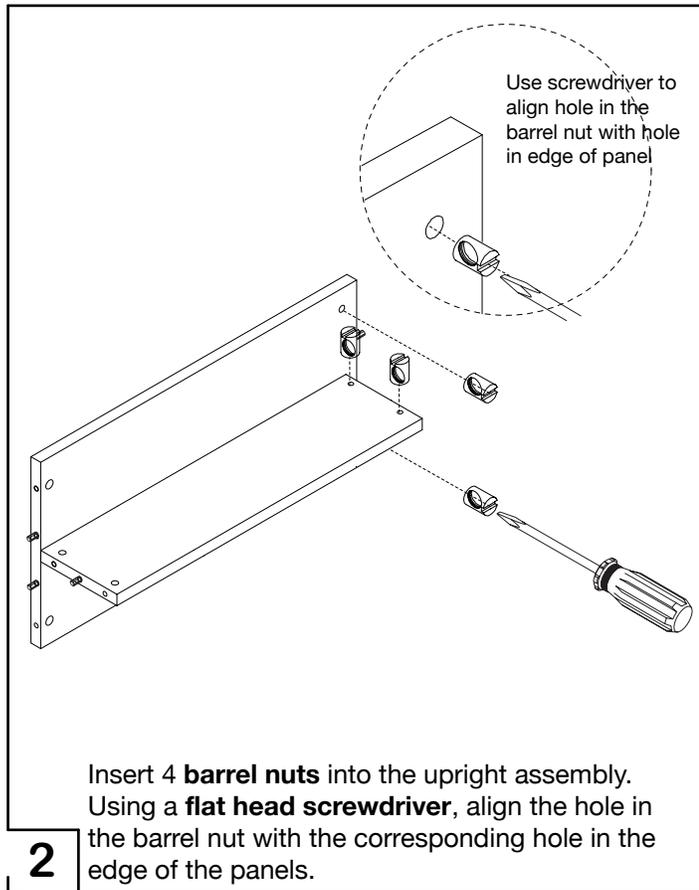

CLEANING AND CARE

Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Do not use furniture wax or polish as the unit is finished with a protective clear lacquer.