


double post SCONCE

CB2

This page lists the contents included in the box. Please take time to identify the hardware as well as the individual components of the product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Please follow the assembly instructions closely. Improper assembly can result in personal or property damage.

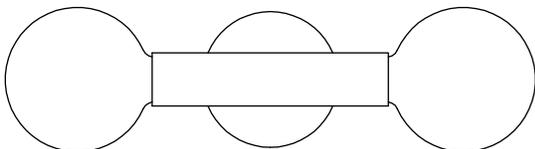

IMPORTANT SAFETY INSTRUCTIONS:


If you are unsure about what mounting method you should use, consult a qualified professional or your local hardware store. We recommend installation of this lamp be performed by a licensed electrician.

cleaning & care

Dust surfaces with a dry soft cloth. Do not use cleaners or polishes on the lamp.

hardware & components

 800.606.6387

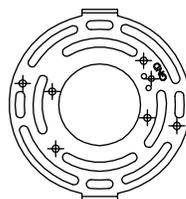

1 - mounting plate



2 - large screws



2 - small screws




3 - wire nuts



2 - 60 watt max incandescent bulbs (NOT INCLUDED)


tools required

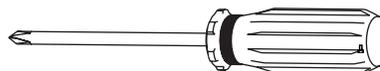

phillips head screwdriver




electrical tape

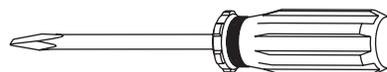

flat head screwdriver

1

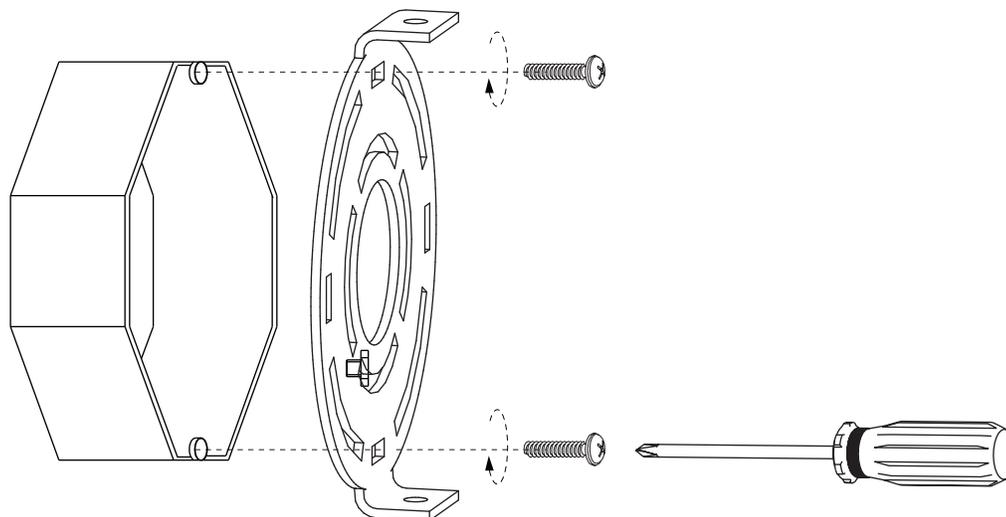


Shut off the main electrical supply from the main fuse box/circuit breaker. Carefully unpack all fixture parts and hardware. Lay items out on a clear workspace.

Align holes in **mounting plate** with corresponding holes in the junction box. Attach mounting plate with 2 **large screws**, and secure with a **phillips head screwdriver**.

double post SCONCE

CB2

2

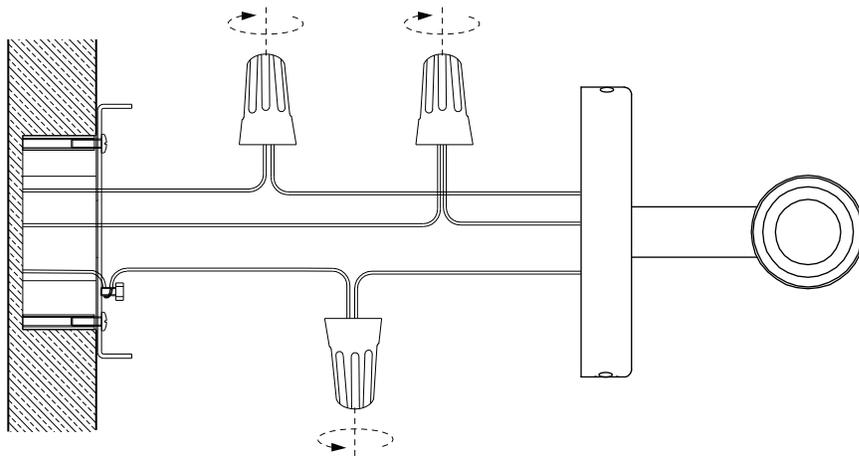

Carefully inspect the fixture wires:

- Neutral fixture wire = *white*
- Hot fixture wire = *black*
- Ground wire = *silver*

- Wrap the *ground* wire of the junction box around the *ground* screw on the **mounting plate** and secure with a **phillips head screwdriver**. Fasten the open end of the *ground* wire from the junction box to the *ground* wire from the lamp with a **wire nut**, and wrap the connection with **electrical tape**.

- Attach the *neutral* fixture wire from the lamp to the *neutral* junction box wire (usually white). Fasten each together with a **wire nut** and wrap the connection with **electrical tape**.


- Attach the *hot* fixture wire from the lamp to the *hot* junction box wire (usually black). Fasten each together with a **wire nut** and wrap the connection with **electrical tape**.

3

A. Neatly tuck wires into the junction box. Fit **lamp fixture** into position, aligning holes of fixture with corresponding holes in the mounting plate. Secure with 2 **small screws**.

B. Insert 2 **bulbs** into the sockets of the lamp fixture. **DO NOT EXCEED SPECIFIED WATTAGE**.

Restore power to junction box and test fixture.
Installation is now complete.

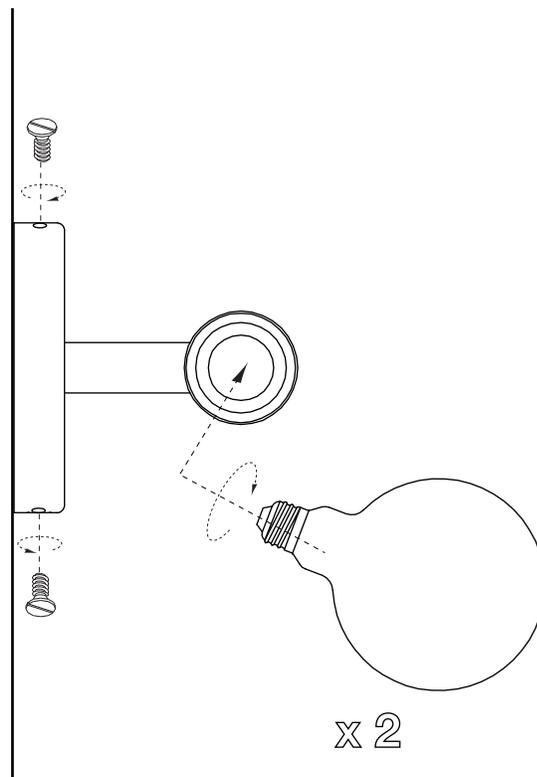

X 2