
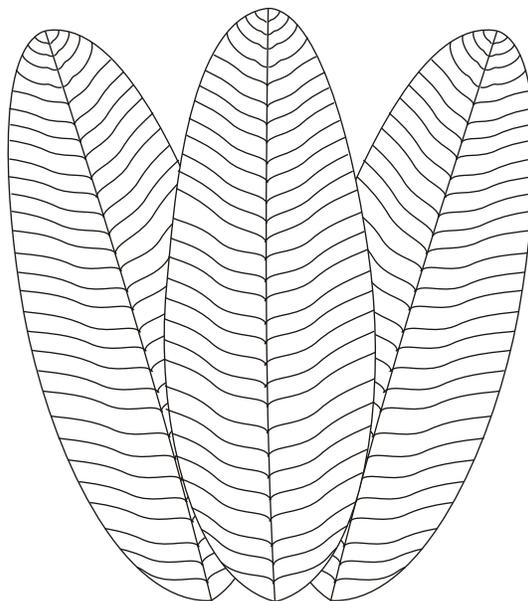



This page lists the contents included in the box. Please take time to identify the hardware as well as the individual components of the product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Please follow the assembly instructions closely. Improper assembly can result in personal or property damage.

**We recommend installation of this lamp be performed by a licensed electrician.**

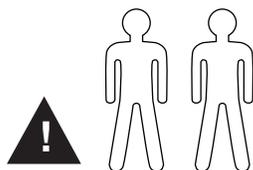

## hardware & components

 800.606.6387



1 - mounting plate  
(pre-attached to lamp fixture)




2 - bolts



1 - 13 watt max CFL candelabra bulb  
(NOT INCLUDED)  
OR  
1 - 60 watt max candelabra bulb  
(NOT INCLUDED)

## tools required




Phillips head screwdriver (long)

## cleaning & care

Dust surfaces with a dry soft cloth. Do not use polishes or cleaners on the lamp.

# palm frond WALL SCONCE

CB2

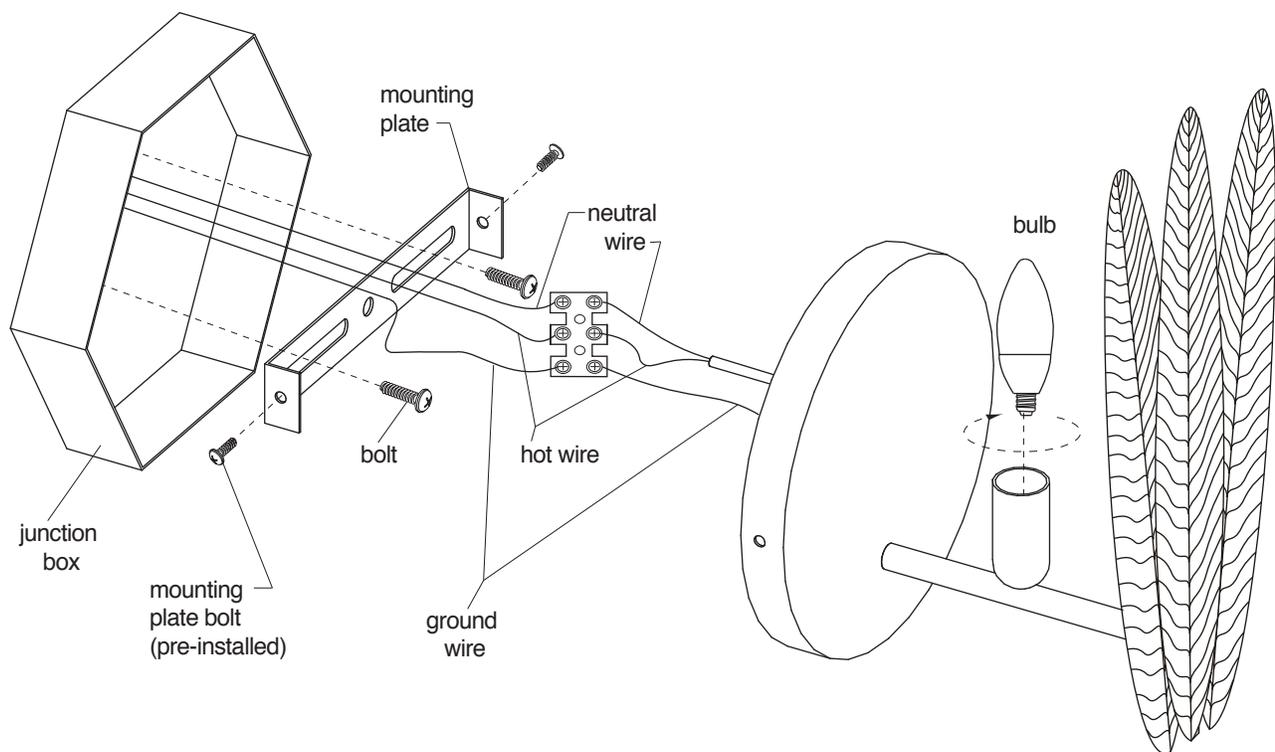

- 1) Shut off the main electrical supply from the main fuse box/circuit breaker.
- 2) Carefully unpack all fixture parts and hardware. Lay items out on a clear workspace. With a **phillips head screwdriver**, unscrew 2 *mounting plate bolts* from canopy of lamp assembly and remove the **mounting plate**. Set lamp assembly aside until further instructions.
- 3) Place the **mounting plate** over the center of the junction box.
- 4) Align holes in **mounting plate** with holes in junction box and attach with 2 **bolts**, using a **phillips head screwdriver**.
- 5) Gently pull wiring from junction box and allow it to hang.
- 6) Carefully inspect the lamp's fixture wires:
  - *Neutral fixture wire* = white
  - *Hot fixture wire* = black
  - *Ground wire* = green
- 7) Loosen the screws on the **wire connector plate**. Wrap the *ground junction box wire* around the *ground screw* on the wire connector plate and re-tighten.
- 8) Wrap the *neutral junction box wire* (usually white) around the *neutral screw* on the wire connector plate and re-tighten.
- 9) Wrap the *hot junction box wire* (usually black) around the *hot screw* on the wire connector plate and re-tighten.  
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 10) Gently tuck wire connections neatly into the junction box.
- 11) Fit lamp assembly over the **mounting plate**. Align holes in canopy with holes in mounting plate and secure with the 2 *mounting plate bolts*, using a **long phillips head screw driver**.
- 12) Insert 1- **bulb (not included)** into socket. DO NOT EXCEED SPECIFIED WATTAGE.
- 13) Restore power to junction box and test fixture.  
Installation is now complete.