


Thank you for purchasing the **Torino Desk**. This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.
 Note: 2 people are recommended to safely assemble this product.


hardware


			
14 - flat washers	14 - spring washers	14 - bolts	4 - large wood dowels
			
6 - small wood dowels	4 - barrel nuts	4 - set screws (pre-attached to barrel nuts)	4 - screw posts

Missing hardware?
 Please call **800.606.6387** for replacements.

tools required


allen wrench (included) 

phillips head screwdriver 

flat head screwdriver 

(We recommend the use of hand tools instead of power tools)

components

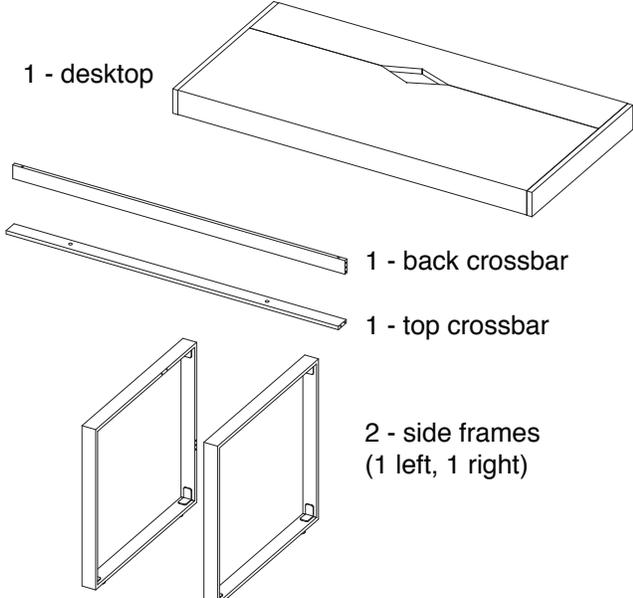

1 - desktop


1 - back crossbar

1 - top crossbar

2 - side frames (1 left, 1 right)

cleaning and care

Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Do not use furniture wax or polish as the unit is finished with a protective clear lacquer.

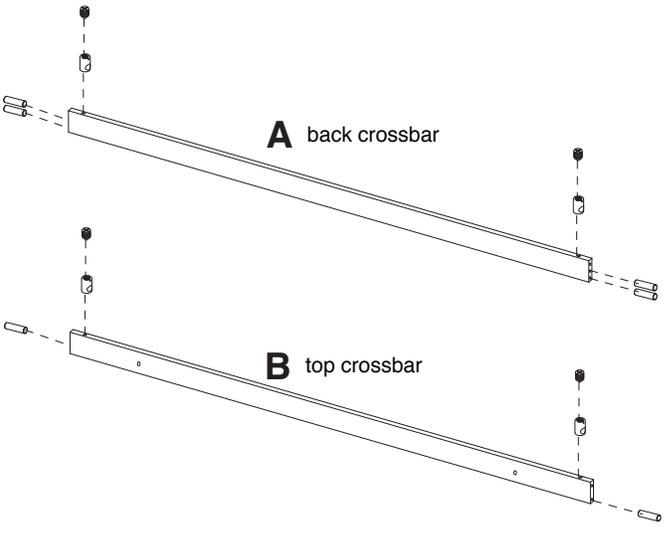

A back crossbar

B top crossbar

1

A. Insert 4 **large wood dowels** and 2 **barrel nuts** into **back crossbar** as shown. Using a **phillips head screwdriver**, remove pre-attached **set screws** from **barrel nuts** and set aside until further instructions. Using a **flat head screwdriver**, align hole of **barrel nuts** with hole on nearest edge.

B. Insert 2 **small wood dowels** and 2 **barrel nuts** into **top crossbar** as shown.

NOTE: Do not over tighten the screw posts

x 2

left and right side frames

2 Insert 2 **screw posts** into **left and right side frames** as shown, using a **phillips head screwdriver**. Do not over tighten the screw posts.

back crossbar

top crossbar

left side frame

3 Fit wood dowels of **top and back crossbars** into corresponding holes of **left side frame** as shown. Make sure screw posts engage barrel nuts. Secure each barrel nut with a **set screw**, using a screwdriver.

right side frame

back crossbar

top crossbar

left side frame

4 Fit wood dowels of **top and back crossbars** into corresponding holes of **right side frame** as shown. Make sure screw posts engage barrel nuts. Secure each barrel nut with a **set screw**, using a screwdriver.

NOTE: Do not over tighten the bolts

A

B

C

desktop

5 A. With the assistance of another adult, position **desktop** upside down onto a clean, padded surface. Insert 4 **small wood dowels** into **desktop** as shown. B. Fit **left and right side frames** onto dowels of **desktop** and attach with 6 **bolts**, 6 **spring washers** and 6 **flat washers**. Secure, but do not over tighten, bolts with an **allen wrench**. C. Attach **top crossbar** with 2 **bolts**, 2 **spring washers** and 2 **flat washers** as shown. Position unit upright and adjust levelers as necessary. Assembly is now complete.