



# 10 degree COAT RACK

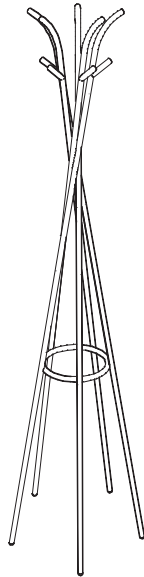

Thank you for purchasing the **10 Degree Coat Rack**. This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

## hardware

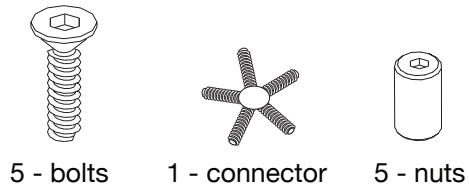


Missing hardware?  
Please call **800.606.6387** for replacements.

## tools required



allen wrench (included)

## components

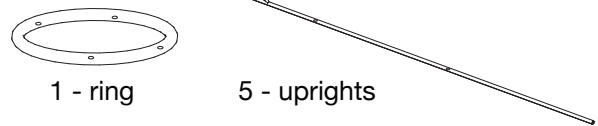

NOTE: Make sure pegs of each upright face outward during assembly as shown

**A** x 5      **B**

**1** A. Insert 1 *bolt* of **connector** into smaller hole of **upright** and loosely attach with 1 **nut**.  
B. Repeat steps for remaining **uprights**.

NOTE: Each upright should overlap the one in front of it

**A** x 5      **B**

NOTE: Do not over tighten the nuts      NOTE: Do not over tighten the bolts

**2** A. Splay out bottom of uprights and fit **ring** in between assembly as shown. Align each hole of ring with nearest hole on each upright. Loosely attach with 5 **bolts**. Adjust assembly as necessary.  
B. At this point, fully tighten all **bolts and nuts** with an **allen wrench**. Assembly is now complete.

**cleaning and care** Do not use polishes or cleaners on your coat rack. Dust surfaces with a dry soft cloth.