

Thank you for purchasing the **Atomic Floor Lamp**. This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

hardware



3 - bolts

Missing hardware?
Please call **800.606.6387** for replacements.

tools required


allen wrench (included)



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to override this safety feature.

components

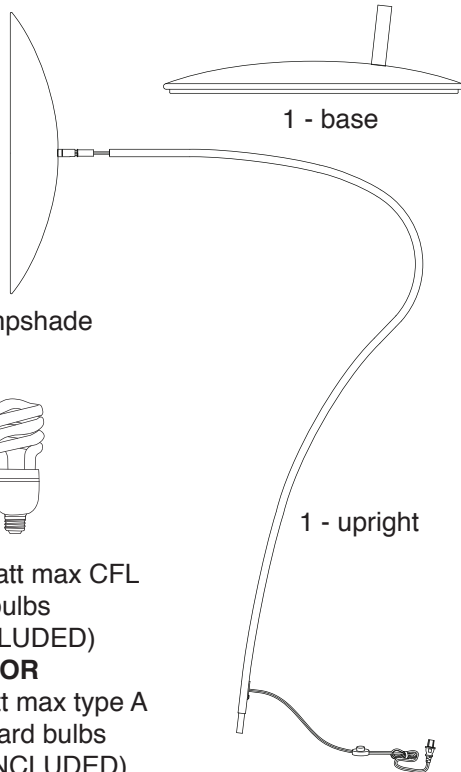

1 - lampshade

1 - base


1 - upright



2 - 13 watt max CFL bulbs
(INCLUDED)

OR

2- 60 watt max type A standard bulbs
(NOT INCLUDED)

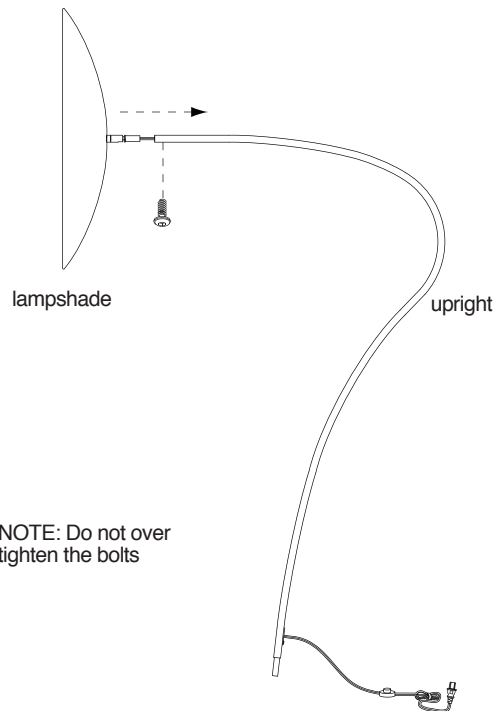

lampshade

upright

NOTE: Do not over tighten the bolts

1

Attach **upright** to **lampshade** with **1 bolt** as shown. Secure, but do not over tighten, the bolts using an **allen wrench**.

lampshade

upright

base

upright

base

2 Attach **upright** to **base** with 2 bolts as shown. Secure, but do not over tighten, the bolts using an allen wrench.

lampshade

upright

base

2 - 13 watt max CFL bulbs (INCLUDED)
OR
2 - 60 watt max type A standard bulbs (NOT INCLUDED)

3 Install 1 bulb (included) into each socket of lampshade assembly. Assembly is now complete.

cleaning & care

Do not use polishes or cleaners on your lamp.
Dust surfaces with a dry soft cloth.