

Thank you for purchasing the **Noir Pendant Lamp**. This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Note: 2 people are required to safely install this product.

components & hardware



2 - mounting bolts



2 - canopy bolts




1 - mounting plate (ground screw pre-attached)



2 - wire nuts




1- 100 watt max type A (standard) bulb (NOT INCLUDED)

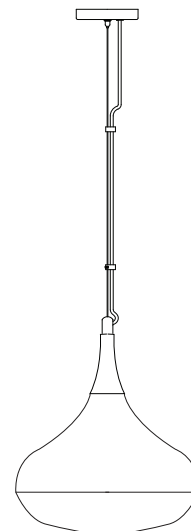

1 - lampshade assembly (shade, tension wire fixture, and canopy assembly pre-assembled)

Missing hardware? Please call **800.606.6387** for replacements.


tools required




flat head screwdriver



allen wrench (included)



phillips head screwdriver



electrical tape


cleaning & care

Do not use polishes or cleaners on your lamp. Dust surfaces with a dry soft cloth.

IMPORTANT SAFETY INSTRUCTIONS:
If you are unsure about your ceiling/wall type or what mounting method you should use, consult a qualified professional or your local hardware store.

We recommend installation of this pendant lamp be performed by a licensed electrician.

assembly

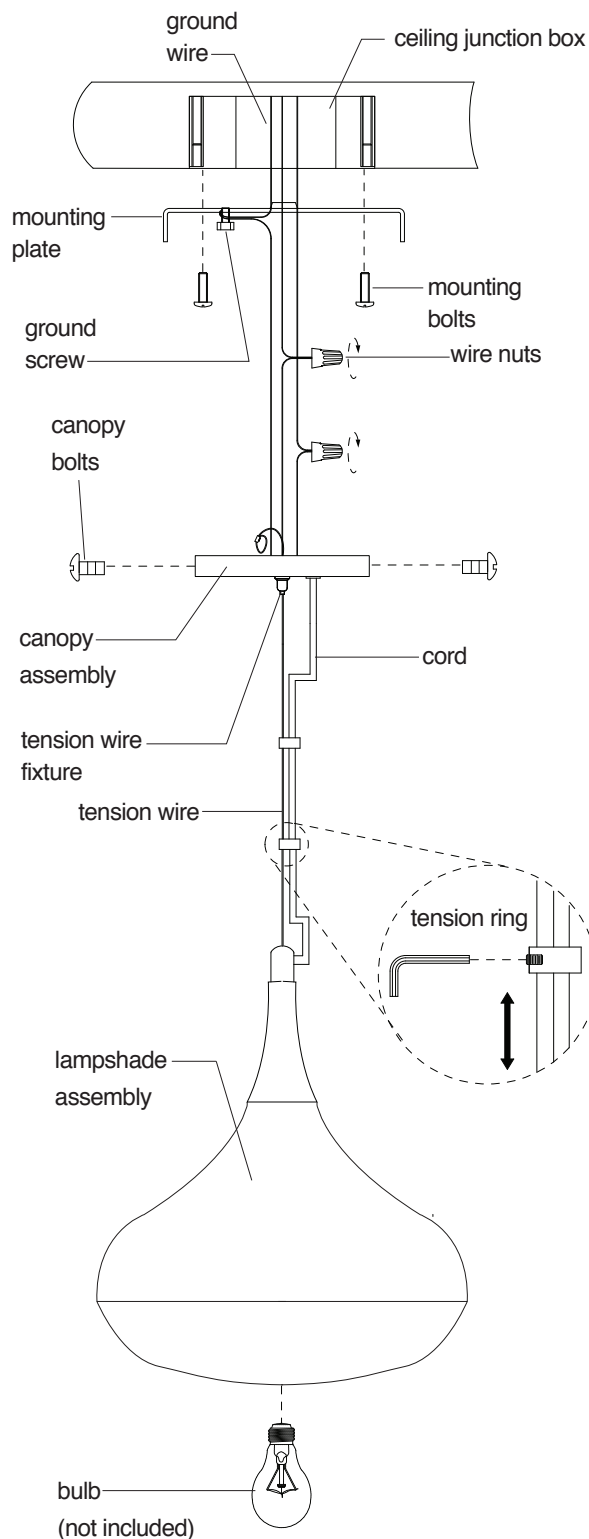

- 1) Shut off the main electrical supply from the main fuse box/circuit breaker.
 - 2) Carefully unpack all fixture parts and hardware. Lay items out on a clear workspace.
 - 3) Loosen the small screw on the **tension wire fixture** to adjust the height. Pull the **tension wire** and cord through the **canopy assembly** to the desired height. Make sure there is no slack on the tension wire. Evenly space the **tension rings** and fasten small screws with an **allen wrench**. When attaching canopy to mounting plate, neatly coil extra tension wire inside the canopy so it is stored under the mounting plate.
 - 4) Place the **mounting plate** over the center of the ceiling junction box.
 - 5) Align holes in mounting plate with holes in junction box and attach with 2 **mounting bolts**. Secure bolts with a **Phillips head screwdriver**.
 - 6) Gently pull wiring down from ceiling junction box and allow it to hang
 - 7) Carefully inspect the pendant's fixture wires:
 - *Neutral fixture wire* = white
 - *Hot fixture wire* = black
 - *Ground wire* = green
 - 8) Wrap *ground wire* of lamp assembly and *ground wire* of junction box together around *ground screw* of mounting plate. Tighten the *ground screw* with a **flat head screwdriver**.
 - 9) Attach the *neutral fixture wire* from the pendant to the *neutral junction box wire* (usually white). Fasten each together with a **wire nut** and wrap the connection with electrical tape.
 - 10) Attach the *hot fixture wire* from the pendant to the *hot junction box wire* (usually black). Fasten each together with a **wire nut** and wrap the connection with electrical tape.
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
- 11) Gently tuck the wire connections neatly into the ceiling junction box.
 - 12) Push **canopy assembly** up over the **mounting plate** until it is flush with the ceiling. Align holes in canopy with holes in mounting plate and secure with 2 **canopy bolts**.
 - 13) Insert 1 - **bulb** (not included) into the socket. **DO NOT EXCEED SPECIFIED WATTAGE.**
 - 14) Restore power to junction box and test fixture. Installation is now complete.