



components & hardware

Missing hardware?
Please call **800.606.6387**
for replacements.



1 - pendant assembly



1 - mounting plate



2 - mounting bolts



2 - wire nuts




2 - canopy bolts



1 - 13 watt max CFL bulb (NOT INCLUDED)
OR 1- 60 watt max type A standard bulb (NOT INCLUDED)


tools required




flat head screwdriver



electrical tape



phillips head screwdriver



allen wrench
(included)


cleaning & care

Dust surfaces with a dry soft cloth.

IMPORTANT SAFETY INSTRUCTIONS:

If you are unsure about your ceiling/wall type or what mounting method you should use, consult a qualified professional or your local hardware store.

We recommend installation of this pendant lamp be performed by a licensed electrician.

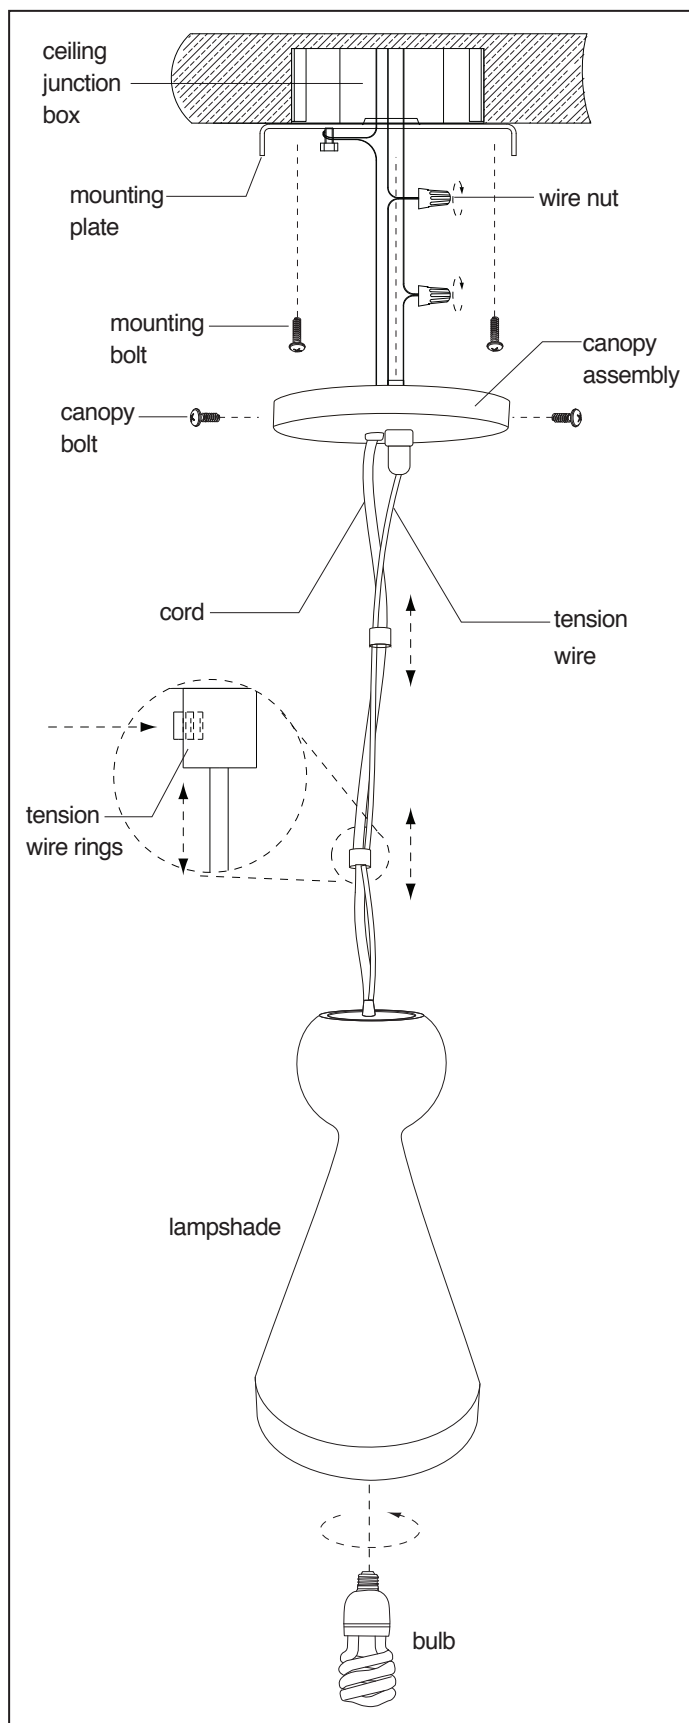

- 1) Shut off the main electrical supply from the main fuse box/circuit breaker.
 - 2) Carefully unpack all fixture parts and hardware. Lay items out on a clear workspace.
 - 3) Loosen the small screws on the **tension wire rings**. Pull the **cord** and **tension wire** through the **canopy assembly**. Make sure there is no slack on the tension wire. Once the tension wire and cord are at desired heights, evenly space the **tension wire rings** and tighten the small screws with an **allen wrench**.
 - 4) Place the **mounting plate** over the center of the ceiling junction box.
 - 5) Align holes in **mounting plate** with holes in junction box and attach with 2 **mounting bolts**, using a **phillips head screwdriver**.
 - 6) Gently pull wiring down from ceiling junction box and allow it to hang.
 - 7) Carefully inspect the pendant's fixture wires:
 - *Neutral fixture wire* = white
 - *Hot fixture wire* = black
 - *Ground wire* = green
 - 8) Attach the *ground wire* of the pendant assembly to the *ground wire* from the junction box and securely wrap around ground screw of the mounting plate.
 - 9) Attach the *neutral fixture wire* from the pendant to the *neutral junction box wire* (usually white). Fasten each together with a **wire nut** and wrap the connection with electrical tape.
 - 10) Attach the *hot fixture wire* from the pendant to the *hot junction box wire* (usually black). Fasten each together with a **wire nut** and wrap the connection with electrical tape.
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 11) Gently tuck wire connections neatly into the ceiling junction box. Gently tuck cord and tension wire neatly into canopy assembly.
 - 12) Fit **canopy assembly** onto **mounting plate** and secure with 2 **canopy bolts**, using a **phillips head screwdriver**.
 - 13) Insert 1- **bulb (not included)** into socket. DO NOT EXCEED SPECIFIED WATTAGE.
 - 14) Restore power to junction box and test fixture. Installation is now complete.