


### components & hardware


Missing hardware?  
 Please call **800.606.6387**  
 for replacements.

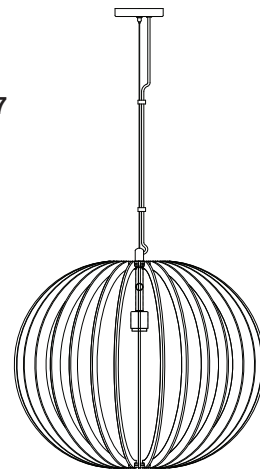

1 - pendant assembly




2 - wire nuts



1 - mounting plate



2 - mounting bolts

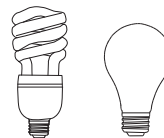


1 - 23 watt max CFL bulb (NOT INCLUDED)  
 OR

1 - 150 watt max type A standard bulb (NOT INCLUDED)



2 - canopy bolts


### tools required



flat head screwdriver



electrical tape



phillips head screwdriver



allen wrench  
 (included)


### cleaning & care

Dust surfaces with a dry soft cloth.

#### IMPORTANT SAFETY INSTRUCTIONS:

If you are unsure about your ceiling/wall type or what mounting method you should use, consult a qualified professional or your local hardware store.

We recommend installation of this pendant lamp be performed by a licensed electrician.

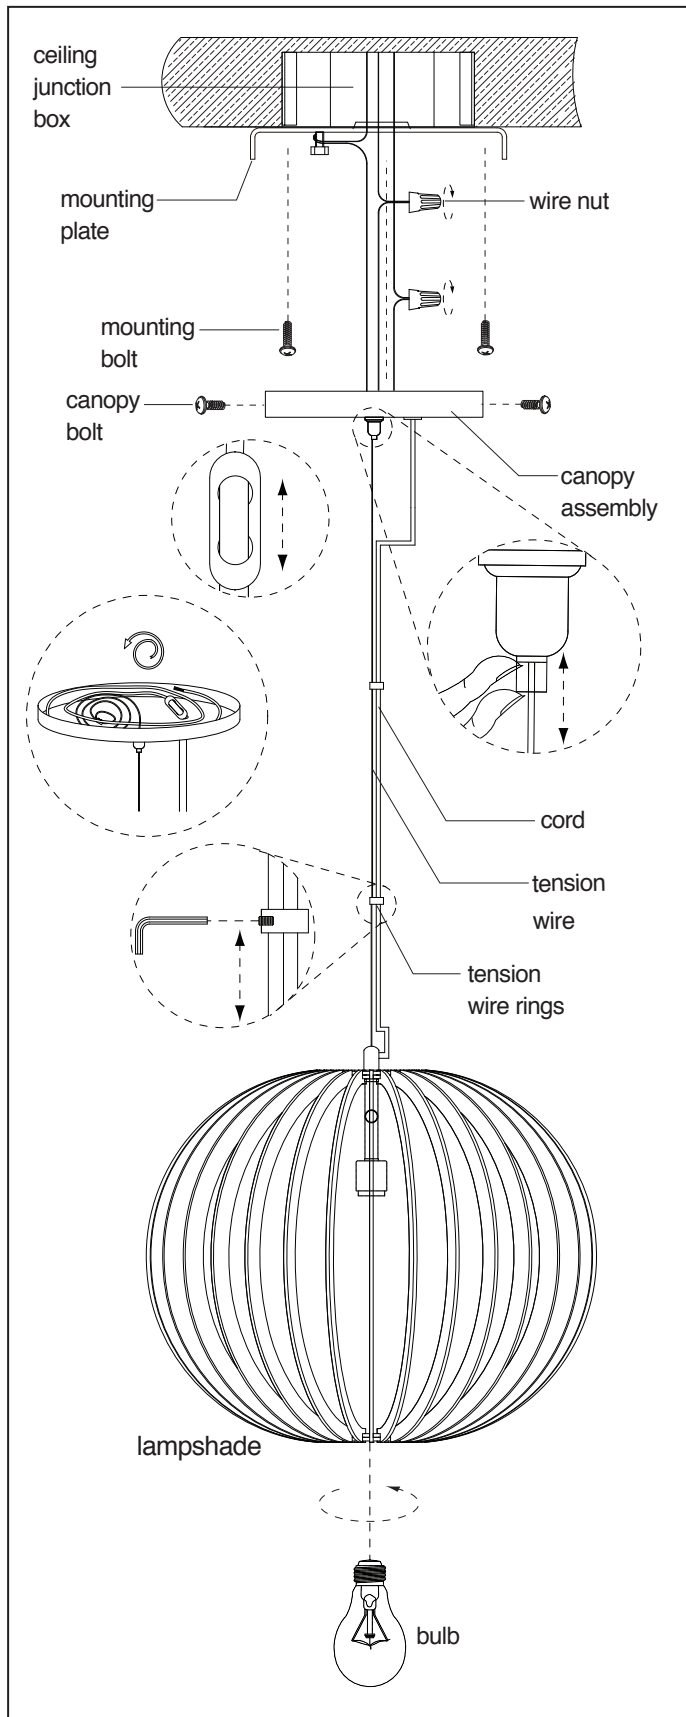

- 1) Shut off the main electrical supply from the main fuse box/circuit breaker.
- 2) Carefully unpack all fixture parts and hardware. Lay items out on a clear workspace.
- 3) Press down on flange of **tension wire** to adjust height of **tension wire**. Adjust clip in **canopy assembly** to adjust height of **cord**. Gently tuck **cord** and **tension wire** neatly into **canopy assembly**.
- 4) Place the **mounting plate** over the center of the ceiling junction box.
- 5) Align holes in **mounting plate** with holes in junction box and attach with 2 **mounting bolts**, using a **phillips head screwdriver**.
- 6) Gently pull wiring down from ceiling junction box and allow it to hang.
- 7) Carefully inspect the pendant's fixture wires:
  - *Neutral fixture wire* = white
  - *Hot fixture wire* = black
  - *Ground wire* = green
- 8) Attach the *ground wire* of the pendant assembly to the *ground wire* from the junction box and securely wrap around ground screw of the mounting plate.
- 9) Attach the *neutral fixture wire* from the pendant to the *neutral junction box wire* (usually white). Fasten each together with a **wire nut** and wrap the connection with electrical tape.
- 10) Attach the *hot fixture wire* from the pendant to the *hot junction box wire* (usually black). Fasten each together with a **wire nut** and wrap the connection with electrical tape.
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 11) Gently tuck wire connections neatly into the ceiling junction box. Gently tuck cord and tension wire neatly into canopy assembly.
- 12) Fit **canopy assembly** onto **mounting plate** and secure with 2 **canopy bolts**, using a **phillips head screwdriver**.
- 13) Loosen the small screws on the **tension wire rings**. Pull the **cord** and **tension wire** through the **canopy assembly**. Make sure there is no slack on the tension wire. Once the tension wire and cord are at desired heights, evenly space the **tension wire rings** and tighten the small screws with an **allen wrench**.
- 14) Insert 1- **bulb (not included)** into socket. **DO NOT EXCEED SPECIFIED WATTAGE.**
- 14) Restore power to junction box and test fixture. Installation is now complete.