








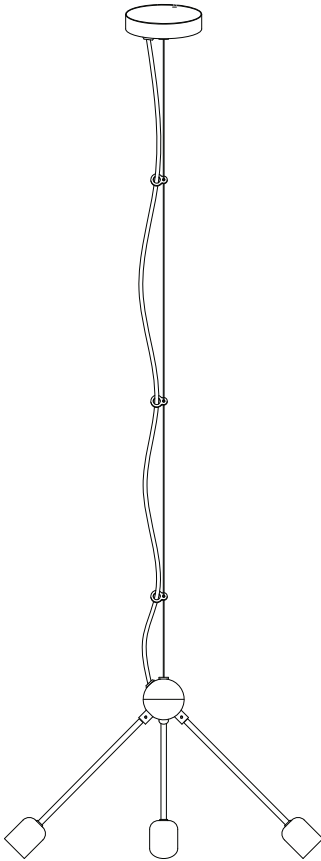

Thank you for purchasing the **Satellite Pendant**. This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Note: 2 people are required to safely install this product.






### components & hardware



-  1 - mounting plate
-  2 - mounting bolts
-  2 - small wire nuts
-  1 - large wire nut
-  2 - washers
-  2 - canopy bolts
-  6 - socket bolts
-  3- 60 watt max type G standard bulbs (INCLUDED)

Missing hardware?  
Please call **800.606.6387** for replacements.

### tools required

-  flat head screwdriver
-  phillips head screwdriver
-  electrical tape
-  small allen wrench (included)
-  large allen wrench (included)


### cleaning & care

Dust surfaces with a dry soft cloth.

**IMPORTANT SAFETY INSTRUCTIONS:**  
If you are unsure about your ceiling/wall type or what mounting method you should use, consult a qualified professional or your local hardware store.

**We recommend installation of this pendant lamp be performed by a licensed electrician.**

## assembly

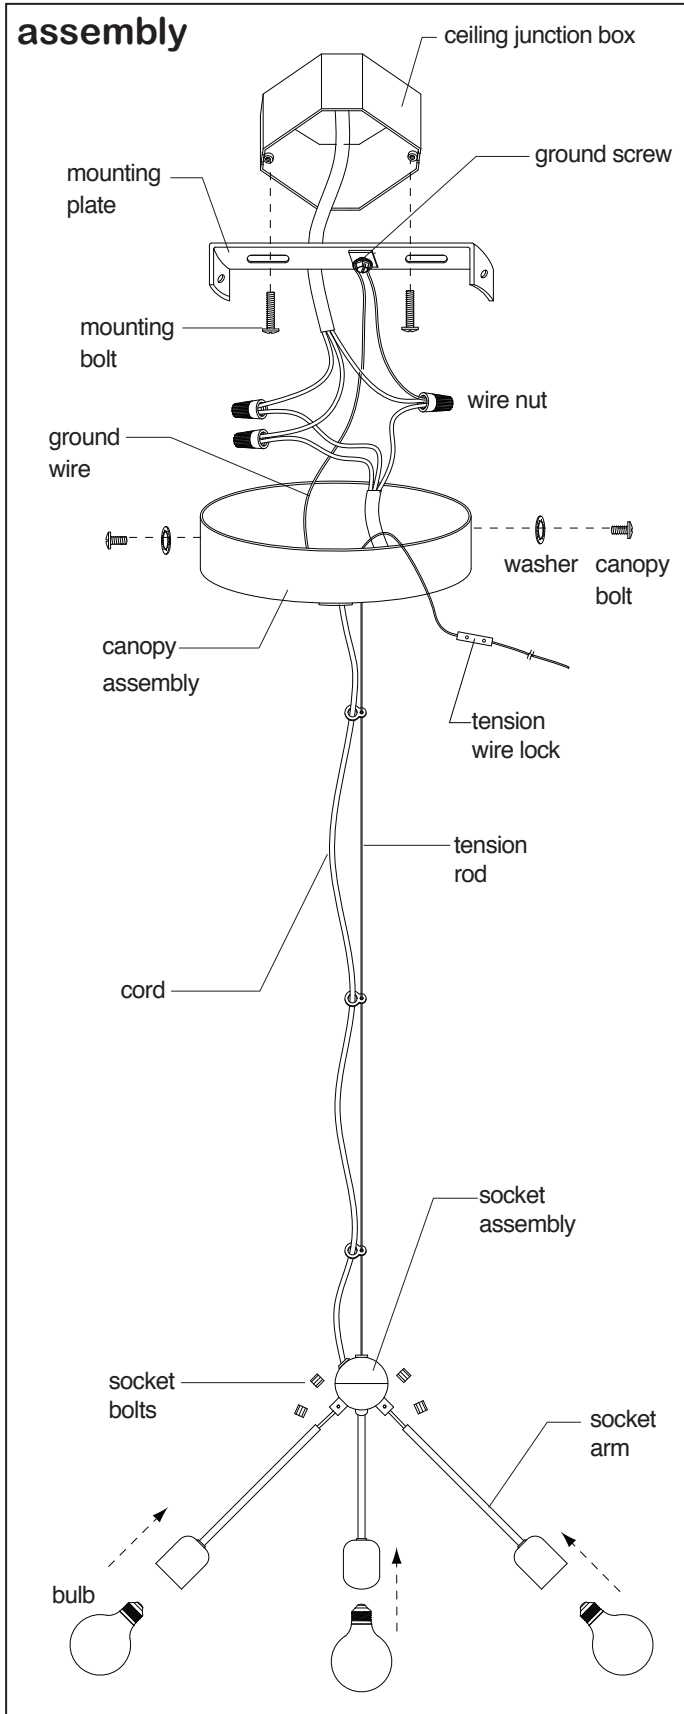

- 1) Shut off the main electrical supply from the main fuse box/circuit breaker.
- 2) Carefully unpack all fixture parts and hardware. Lay items out on a clear workspace.
- 3) Locate **tension wire lock** in **canopy assembly**. Using a **small allen wrench**, release 2 **screws** on the **tension wire lock**. Adjust length of **tension wire** to match desired height of pendant. Re-tighten screws to fix tension wire.
- 4) Place the **mounting plate** over the center of the ceiling junction box.
- 5) Align holes in mounting plate with holes in junction box and attach with 2 **mounting bolts**. Secure bolts with a **phillips head screwdriver**.
- 6) Gently pull wiring down from ceiling junction box and allow it to hang
- 7) Carefully inspect the pendant's fixture wires:
  - *Neutral fixture wire* = white
  - *Hot fixture wire* = black
  - *Ground wire* = green
- 8) Wrap *ground wire* of lamp assembly and *ground wire* of junction box together around *ground screw* of mounting plate. Tighten the *ground screw* with a **flat head screwdriver**.
- 9) Attach the *neutral fixture wire* from the pendant to the *neutral junction box wire* (usually white). Fasten each together with a **wire nut** and wrap the connection with electrical tape.
- 10) Attach the *hot fixture wire* from the pendant to the *hot junction box wire* (usually black). Fasten each together with a **wire nut** and wrap the connection with electrical tape.
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 11) Gently tuck the wire connections neatly into the ceiling junction box.
- 12) Fit **canopy assembly** onto **mounting plate** and secure with 2 **canopy bolts** and 2 **washers**.
- 13) Attach 2 **socket arms** to **socket assembly**. Secure each arm with 2 **socket bolts**, using an **large allen wrench**.
- 14) Insert 3- **bulbs** into sockets. **DO NOT EXCEED SPECIFIED WATTAGE**.
- 15) Restore power to junction box and test fixture. Installation is now complete.