

components & hardware

1 - pendant assembly

1 - mounting plate

2 - mounting bolts

2 - wire nuts

2 - canopy bolts

1 - lampshade

1- 100 watt max type A standard bulb (NOT INCLUDED)

Missing hardware?
Please call **800.606.6387** for replacements.

tools required

flat head screwdriver

phillips head screwdriver


electrical tape

cleaning & care

Dust surfaces with a dry soft cloth.

IMPORTANT SAFETY INSTRUCTIONS:
If you are unsure about your ceiling/wall type or what mounting method you should use, consult a qualified professional or your local hardware store.

We recommend installation of this pendant lamp be performed by a licensed electrician.

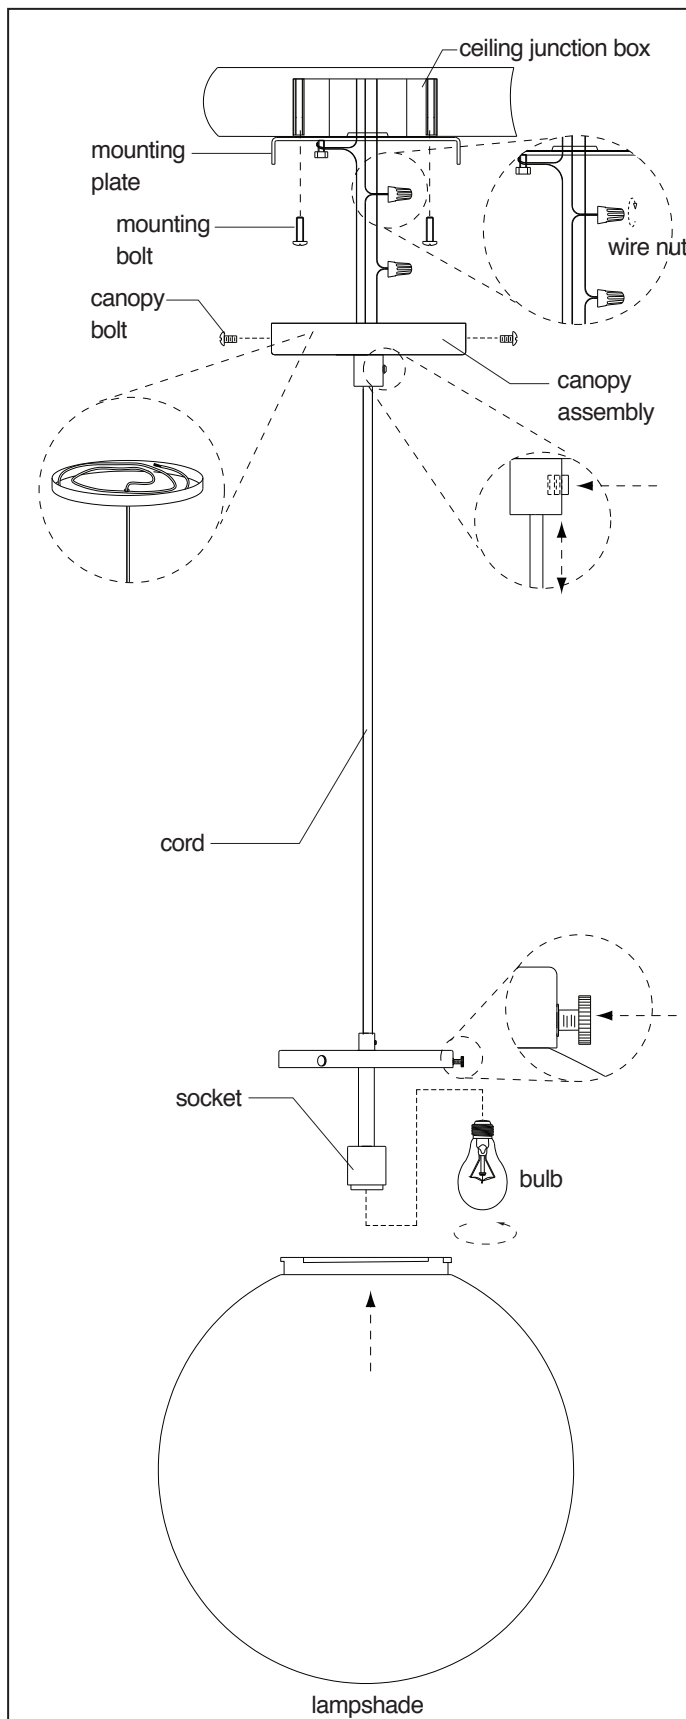

- 1) Shut off the main electrical supply from the main fuse box/circuit breaker.
- 2) Carefully unpack all fixture parts and hardware. Lay items out on a clear workspace.
- 3) Place the **mounting plate** over the center of the ceiling junction box.
- 4) Align holes in mounting plate with holes in junction box and attach with 2 **mounting bolts**. Secure bolts with a **phillips head screwdriver**.
- 5) Gently pull wiring down from ceiling junction box and allow it to hang
- 6) Carefully inspect the pendant's fixture wires:
 - *Neutral fixture wire* = white
 - *Hot fixture wire* = black
 - *Ground wire* = green
- 7) Attach the *ground wire* of the lamp assembly to the *ground wire* from the junction box and securely wrap around ground screw of the mounting plate.
- 8) Attach the *neutral fixture wire* from the pendant to the *neutral junction box wire* (usually white). Fasten each together with a **wire nut** and wrap the connection with **electrical tape**.
- 9) Attach the *hot fixture wire* from the pendant to the *hot junction box wire* (usually black). Fasten each together with a **wire nut** and wrap the connection with electrical tape.
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 10) Gently tuck wire connections neatly into the ceiling junction box.
- 11) Using a **flathead screwdriver**, adjust height of **cord**. Gently tuck cord neatly into canopy assembly.
- 12) Fit **canopy assembly** onto **mounting plate** and secure with 2 **canopy bolts**.
- 13) Loosen **bolts** on **lampshade base** and carefully remove **lampshade**. Set aside until further instructions.
- 14) Insert 1- **bulb** into socket. **DO NOT EXCEED SPECIFIED WATTAGE**.
- 15) Fit **lampshade** into base and loosely attach bolts. At this point, evenly tighten each bolt so that it the lampshade is securely supported. **Do not overtighten the bolts**.
- 16) Restore power to junction box and test fixture. Installation is now complete.